

System Indicator Lights

POWER INDICATOR LIGHTS

- OFF → There is no power to the Charging Cart.
SOLID BLUE → The Charging Cart has power and is ready to charge.

POWER INDICATOR LIGHTS

 
- OFF → The Charging Cart has no access to the tablet in that slot.
RED → Tablet is charging.
FLASHING → Tablet charging cycle is nearly complete.
RED/GREEN → The tablet is fully charged.

AFTER SALES SERVICE

The following conditions are not covered by the after-sales service:

- ① Damage caused by improper use, maintenance or storage;
- ② Damage caused by self-modification;
- ③ Damaged after purchase due to dropping and during installation;
- ④ Damage caused by force majeure factors such as earthquakes, fire, lightning strikes, abnormal voltages and secondary disasters.

Formcase INSTRUCTION MANUAL

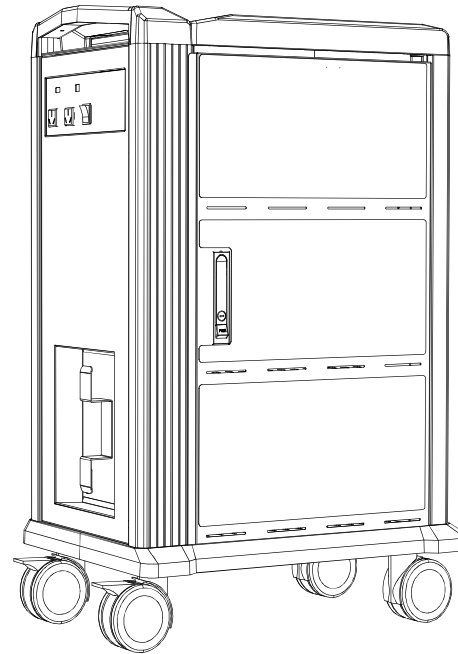

MODEL

T16
T32
T48

LIST OF ACCESSORIES

- AC Power Cord*1
- type-c Cable*16/32/48 type-c cords
- Door Key*2
- Manual*1

SPECIFICATIONS

 
- Voltage: AC200~230V 50Hz
- Current: 10A
- Output for rechargeable models only: 5V/2.4A
Data output: 5V/2A

CAUTIONS

Please read this instruction carefully before installation and use, and check whether the electrical socket is grounded. If it is not grounded, there is a risk of leakage. Do not install this machine near the window to avoid corrosion of the body caused by exposure and rain, and keep away from possible damage to ensure rechargeable vehicle service life. Due to the continuous upgrading and transformation of the product appearance, there may be some differences between the physical object and the manual picture, and the user is responsible for the damage caused by improper operation.


- ◇ Unauthorized maintenance personnel shall not disassemble the circuit part of the cart;
- ◇ Unauthorized maintenance personnel shall not replace the internal electrical appliances of the cart;
- ◇ It is strictly forbidden to sprinkle water, oil and other liquid into the cart;
- ◇ It is forbidden to climb and stand on the cart;
- ◇ It is strictly forbidden to deeply rotate fans and sockets such as fingers and bamboo strip.
- ◇ Do not hang on the door to prevent personal injury from the door pulling or the charging cart tipping over.

PRODUCT DESCRIPTION

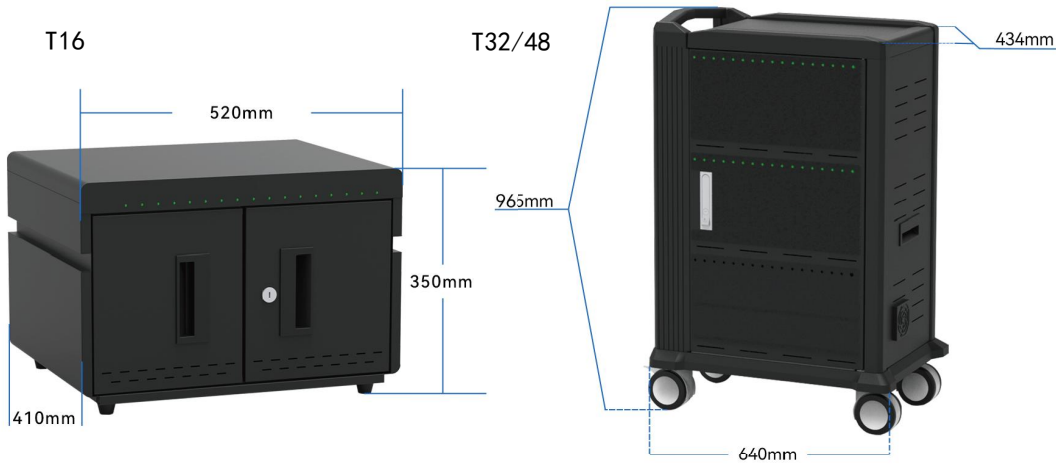


OPERATION STEPS

 
- ① Please turn off the Master Power Switch before proceeding.
- ② Unlock and open the door.

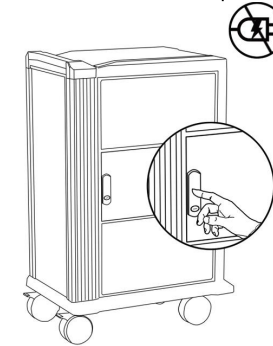

 - ③ Insert each device into an open slot.
NOTE: Some users assign specific devices to specific slots by serial number or other method of identification. If such assignments have been made, be sure to match each device to the correct slot.

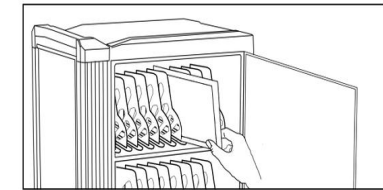

 - ④ For each device, connect its type-c cord to the type-c port corresponding to the device's slot. Then connect the type-c cord to the device.

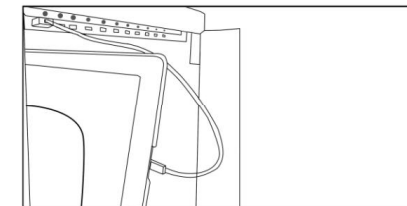

- ⑤ Close and lock the door. Make sure the Charging Cart's Power Cord is connected to the wall socket.

- ⑥ Turn the Master Power Switch to "ON". Switch light on indicates there is power to the Charging Cart. The LED Charging Indicator for each connected device will glow RED.

This indicates the device(s) are charging.

